

# ELITE SERIES LAW ENFORCEMENT/INFRARED HYBRID


# **GOOD TO KNOW**

#### PROTECT YOUR DEVICE

· gadevice.com/warranty

#### GET TO KNOW YOUR DEVICE

· gadevice.com/learn

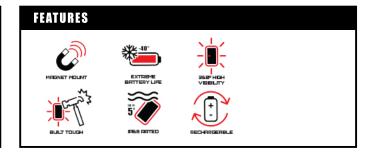

# **GETTING STARTED**

#### INITIAL ACTIVATION


- · Hold down the Front and Rear buttons for 2 seconds work light turns ON
- · OR plug your device in work light will flash
- · Unit turns on at Max brightness

### SLEEP MODE / POWER DOWN

· Hold down the Front and Rear buttons for 3 seconds - work light flashes 3 times - unit is OFF. Follow same process to power unit ON.

### CHARGING (charge time dead to full - approx. 2 hours)

· Open sealed door on the bottom of the device and plug in USB cable. Charging can be with any USB 2000mA ac adapter used with cell phones. Note: Work light single flashes when charging, flashes twice when fully charged.

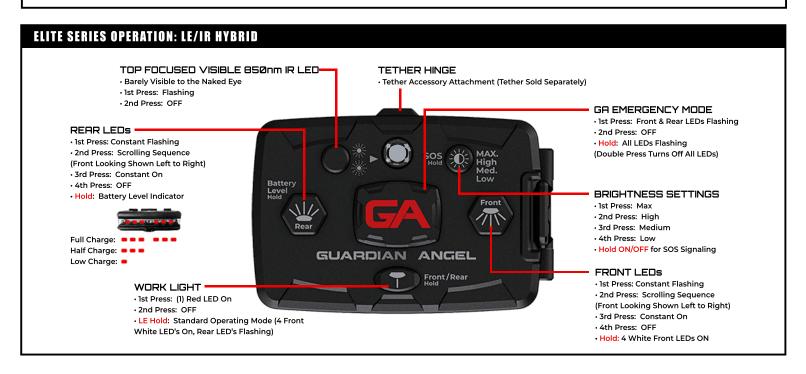























































The Guardian Angel® has Neodymium Magnet built into the product for mounting purposes. Never allow neodymium magnets near a person with a pacemaker or similar medical aid. The strong magnetic fields of the magnet can affect the operation of such devices. Neodymium magnets are extremely strong, and must be handled with care to avoid personal injury. Fingers and other body parts can get severely pinched between two attracting magnets. Neodymium magnets can also damage magnetic media such as floppy disks, credit cards, magnetic ID. cards, cassette tapes, video tapes or other such devices. They can also damage televisions, VCRs, computer monitors and other CRT displays. Never place neodymium  $magnets\ near\ electronic\ appliances.\ Children\ should\ not\ be\ allowed\ to\ handle\ neodymium\ magnets\ as\ they\ can\ be\ dangerous.\ Small\ magnets\ pose\ a\ choking\ hazard\ and\ should\ never\ be\ swallowed\ or\ inserted\ into\ any\ part\ of\ the\ body.\ Seek$ immediate medical attention if magnets are swallowed or inhaled. This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1)this device may not cause harmful interference, and (2) this device  $must\ accept any interference\ received, including\ interference\ that\ may\ cause\ undesired\ operation.\ For\ a\ full\ list\ of\ safety\ notices\ and\ terms,\ please\ visit\ \frac{http://www.quardianangeldevices.com/terms}{http://www.quardianangeldevices.com/terms}$